


WingIts

THE SOLUTIONS COMPANY

BATH ACCESSORY WINGIT INSTALLATION FOR OVAL SUITE AND ALL CRESCENT RODS

**LOCATION - ALL CURVED RODS
MUST BE INSTALLED 3" FURTHER INTO
THE SHOWER than standard straight rods -**
keeping the water in the tub.

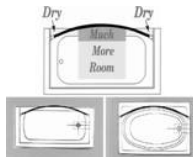

Crescent *curved* Shower Rods give 25% more room.
Reduced Bow Crescent Rod should be used in Limited
Space Conditions.


NEW CONSTRUCTION -

Install the Crescent Shower Rod or OVAL Shower
Rod 3"-5" further in than the edge of the tub.

EXISTING INSTALLATION -

Use our matching stainless steel Cover Plates to
conceal the existing installation holes.

Picture at right shows the **Crescent Rod Cover
Plate** and Mounting Bracket aligned with
the existing rod (Crescent Rod will be
installed 3" further into the tub and the
holes will still be covered).

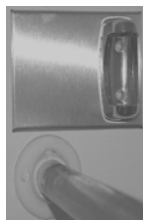

Install the Crescent Rod or OVAL Rod at
the same height as existing rod, allowing
for the use of a **Standard Shower Cur-
tain.**

BATH ACCESSORY WINGITS are the
ONLY GUARANTEED Installation.

Install using our patented Bath Accessory
WingIt (BAW30)
Guaranteed to NEVER Loosen - NEVER Sag!

Bath Accessory WingIts (BAW30) consist of:

- (4) 3" Stainless Steel Screws*
- (4) Wings
- (2) Faceplates (w/ washers)
- (2) Waterproof Adhesive Tape

*Longer Screws Available.



Each Bracket

**Use one set of Bath Accessory WingIts per
Rod.**

(Continued . . .)

For **GUARANTEED INSTALLATIONS INTO STRUCTURAL BLOCKING:**

Order the Bath Accessory WingIt Faceplate Assem-
bly (BAWFA) - Crescent Rod Faceplate and WATER-
PROOF tape - 877.894.6448.

Installing CRESCENT Rods & OVAL Accessories


Tools Required:

- Screwdriver
- 3/4" Drill (Our **APACHE 200** rated @ 200 holes in ceramic wall tile)


STEP 1** - Separate the pieces of the bracket
and use the Bracket to determine the location of
the holes. Adhere the tape to the wall in the
proper location. Drill 3/4" holes at the positions
matching the holes in the tape. For ceramic tile
walls, use our Industrial Carbide 3/4" **Apache 200**
Drill Bit.

****The installation holes need to be clean on
both sides of the wall. Cut through the back of
the wall slowly.**

STEP 2— Assemble the WingIt onto the
Bracket. If using the Back Plate,
apply to the faceplate prior to assembling
the wings onto the screws.

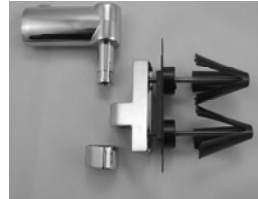

STEP 3— Using a screw-gun, insert the WingIt into the
drilled holes. Push Wings through the wall - *activating* the
Wings in the wall hollow. The Faceplate will adhere to the
wall. **Hold the mounting bracket**
away from the wall and tighten
screws -

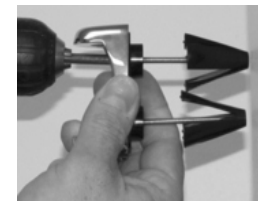

ALTERNATE TIGHTENING
the SCREWS to INSURE the
WINGS INTERACT WITH the BACK of the
WALL.

Assemble the Bracket and Accessories.


You are using the **"World's Strongest Fastener"**

NOTE: The SET SCREWS for assembling the Bracket may be located
in the standard Hardware Package. These set screws are small, please
look carefully. The wrench to install the Set Screws is included.


Additional products from WingIts!

World's Strongest Towel Rack

- 50% more structure.
- Stainless Steel.
- Ultimate engineering.
- Quick Installation with the MASTER Anchor—World's Strongest Fastener
- NO BLOCKING REQUIRED!


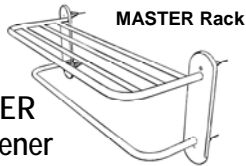


Includes 4 patented MASTER Anchors.
(World's Strongest Fasteners)
NEVER Rust, NEVER Sag, NEVER Loosen!

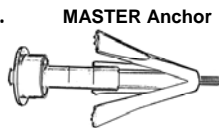

World's Strongest Basket

NO BLOCKING REQUIRED—
structural basket for soap or foot rest!
Includes the patented MASTER Anchors.

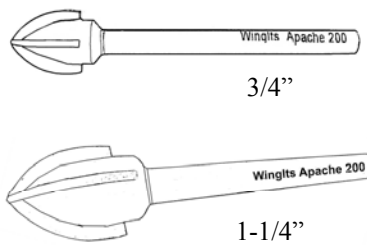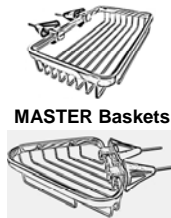


WingIts APACHE 200 Drill bits.

Fast easy installation — rated at over 200 holes in ceramic wall tile.

WingIts' Commercial Grab Bar WingIt

EASY AS:

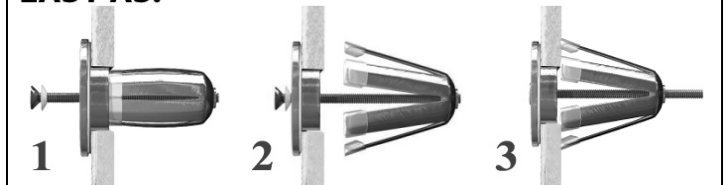

World's Largest Selection of Grab Bars

- 18/8 Stainless Steel
 - Concealed Flanges
 - ADA Compliant
 - Available in different colors and finishes
- Decorator Series*
Sure Grip




Diamond Grip Grab Bar

OVAL CRESCENT SUITE




Structure, Beauty and Durability throughout the entire Suite!

The ORIGINAL Crescent *curved* Shower Rod

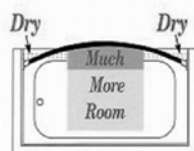


WingIt Crescent Shower Rods - 6" Shower Rod imposed over Standard 9", pictured.

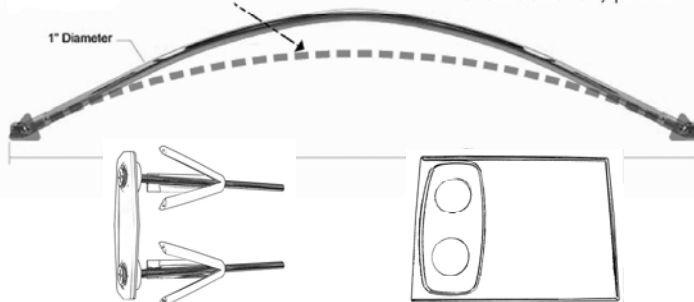

Bath Accessory WingIts


Cover Plates

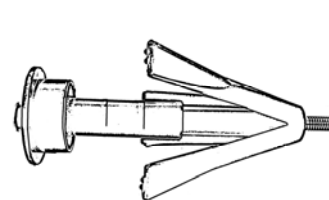


MAW35
MASTER Anchor




RESGBW35
Refined Engineered Safety
Grab Bar WingIt

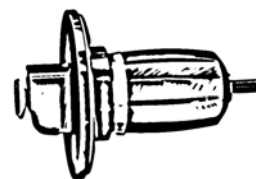


XGBW40
Suspension System WingIt

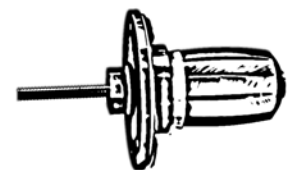

SRGBW40
Special Reverse Grab Bar WingIt

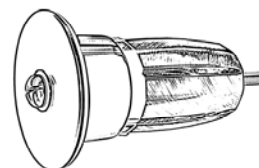

GCW40
Generic Commercial WingIt

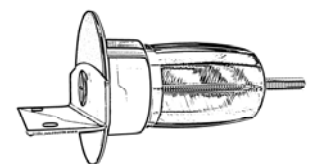

CTW40
Counter Top WingIt