

# WINGITS® MODERN Elegance™

## Stainless Steel Fastener

**Model:**  
**GBWME**

**World's Strongest Fastener®**




**Part Numbers:**  
**GBWME40**  
18/8 (304) Stainless Steel



### Features / Benefits

- Exceeds ADA Guidelines and ALL Building Codes
- Eliminates the need for Blocking
- Water-proof and Fire-proof
- Rated up to 800 lbs. in Drywall with Tile
- Used to Install WINGITS® Grab Bars
- Patented Worldwide

AS EASY AS ...

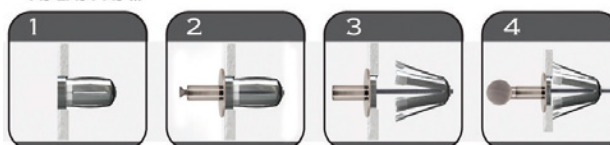

**Install WINGITS® GBWME40 Fastener Quickly and Easily with the APACHE200 Carbide Drill Bit**



### Industrial Grade Carbide Drill Bit

- Rated at 200 holes in ceramic wall tile
- Drills holes through ceramic wall tiles in seconds
- No hammer drill required - this precision cutting drill does all the work
- Industrial grade carbide cutting tool
- Engineered for standard and cordless drills
- Designed for ceramic, marble and plaster

<b>MECHANICAL DATA</b>
<b>Height:</b> 1.375" (3.5cm)
<b>Length:</b> 1.375" (3.5cm)
<b>Projection:</b> 4" (10.16cm)
<b>PRODUCT COMPOSITION</b>
Entire product is solid 18/8 (304) welded stainless steel with plastic caps on end of wings.
<b>MODALITY</b>
<b>Use:</b> Can be used in any position.
<b>INSTALLATION</b>
<b>WINGITS® GBWME40</b> WINGITS® is used in walls framed with 2 x 4's (3-1/2" hollow or larger). <b>WINGITS®</b> come standard with a stainless steel 4" screw for walls up to 1 1/4" thick. Larger screws available for thicker walls.
<b>RECOMMENDED INTEGRATION</b>
It is recommended that <b>WINGITS®</b> GBWME40 be used with <b>WINGITS®</b> MODERN Elegance™ Grab Bars.

GBWME40\_SpecSheet\_20141110

### WINGITS® MODERN Elegance™ Grab Bar Fastening System Installation Guide WINGITS® Grab Bar Fastening Systems Exceeds Building Codes For Grab Bars In The Following Wall Substrates:

- 5/8" drywall - painted or wallpapered
- 1/2" or 5/8" drywall with tub surrounds
- 1/2" or 5/8" drywall with tile, marble or stone
- 1/2" or 5/8" drywall with any panel types including fiberglass, faux marble, acrylic and plastics
- Multiple layers of drywall
- Plaster and lathe
- 1/4" acrylic / fiberglass tub surrounds
- Most wall panels, all masonry type boards, with or without decorative panels

### WINGITS® MODERN Elegance™ uses Indicator Points to simplify installation.





1. Remove the stand-offs to expose the **INDICATOR POINTS** on the accessory.
2. To ensure adequate clearance, a stud finder should be used to verify there are no studs within the area where the WingIts™ will be installed. Make sure that there is at least 1.5" away from the edge of the stud.
3. Place the accessory in the preferred location and **push on the accessory to mark the points where stand-offs will be mounted.**

### GBWME40

#### Installing MODERN Elegance™ Grab Bars

1. Drill 1.25" hole on the marks by the **INDICATOR POINTS**.
2. Peel one side off of waterproof tape and adhere around drilled hole in wall.
3. Remove center **SCREW** completely.
4. Insert **SCREW** through **STAND-OFF** and rethread into fastener.
5. Insert the WingIts™ into the wall.
6. Push the **SCREW** head all the way into the **STAND-OFF** until the wings "POP" behind the wall.
7. Pull on **STAND-OFF**, remove tape liner - keep **STAND-OFF** away from wall as you tighten.
8. Attach Grab Bar and tighten set screws.

AS EASY AS ...

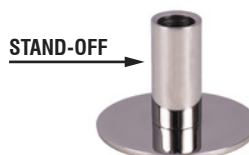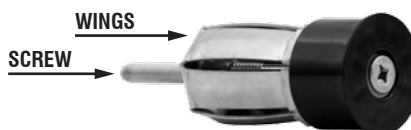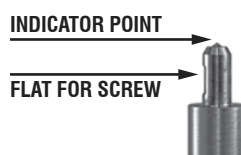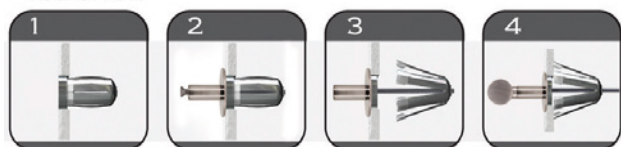

View Installation Videos at:  
[www.wingits.com](http://www.wingits.com)