

SET SCREW GRAB BAR WINGITS – SSGBW40

SET SCREW GRAB BAR WINGITS

Notice:


The attached sheet is the Generic Commercial WingIt Installation page.

These WingIts have been modified to work with the Set Screw Grab Bars.

Installation Instructions:

1. Create 1 ¼” holes in wall substrate at the desired location.
2. Clear debris and measure the thickness of the wall substrate.
3. Remove the tape liner by the serrated nut. Take off the serrated nut, put on the grab bar mounting bracket on the tape and re-install the nut.
4. Remove the underside tape liner and insert WingIt in the wall. Press onto the wall to insure a waterproof seal.
5. Back off the nut approximately the same length as the wall thickness.
6. Hit the threaded rod/serrated nut with a hammer and eject the wing assembly in the wall hollow.
7. Pull on the threaded rod and tighten the serrated nut.
8. DO NOT OVER TIGHTEN!
9. Install the grab bar.

Call toll free w/ questions... 877-894-6448

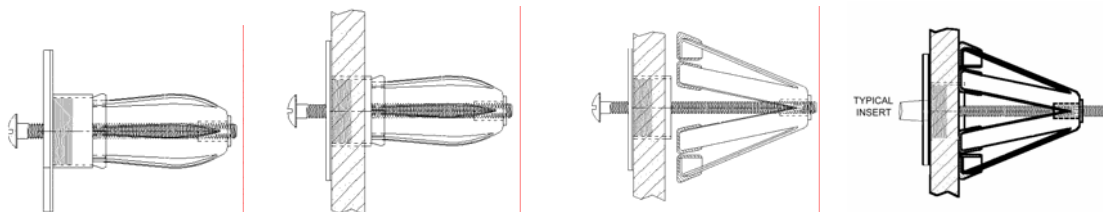

WINGIT Innovations, LLC 714 Fifth Ave., PO Box 97, Bradley Beach, New Jersey 07720
Fax: 732-869-9474 Web > www.wingits.com E-mail > wingits@wingits.com
Phone: 732-869-4466 Toll free: 877-8WingIt